

pst-circ

A PSTricks package for drawing electric circuits

ver. 1.39

Christophe Jorssen*and Herbert Voß†

April 3, 2005

Abstract

‘pst-circ’ is a PSTricks package to draw easily electric circuits. Most dipoles, tripoles and quadrupoles used in classical electrotechnical circuits are provided as graphical units which can readily be interconnected to produce circuit diagrams of a reasonable level of complexity.

Contents			
1 Introduction	1	4 Parameters	7
2 Usage	2	4.1 Label parameters	7
2.1 Parameters	2	4.2 Current intensity and electrical potential parameters	8
3 Macros	3	4.3 Parallel parameters	10
3.1 Dipole macros	3	4.4 Wire intersections	11
3.2 Tripole macros	4	4.5 Dipole style parameters	12
3.3 Quadrupole macros	5	4.6 Tripole style parameters	14
3.4 Multidipole	6	4.7 Other Parameters	15
3.5 Wire	6	5 Examples	16
3.6 Potential	7	6 Adding new components	23
3.7 ground	7	7 Acknowledgements	25

1 Introduction

The package ‘pst-circ’ is a collection of graphical elements based on PSTricks that can be used to facilitate display of electronic circuit elements. For example, an equivalent circuit of a voltage source, its source impedance, and a connected load can easily be constructed along with arrows indicating current flow and potential differences. The emphasis is upon the circuit elements and the details of the exact placement are hidden as much as possible so the author can focus on the circuitry without the distraction of sorting out the underlying vector graphics.

*christophe.jorssen@noos.fr

†voss@PSTricks.de

2 Usage

2.1 Parameters


There are specific parameters defined to change easily the behaviour of the pst-circ objects you are drawing.

intensity (boolean): (default: *false*)
intensitylabel (string): (default: *\empty*)
intensitylabeloffset (dimension): (default: *0.5*)
intensitycolor (PSTricks color): (default: *black*)
intensitylabelcolor (PSTricks color): (default: *black*)
intensitywidth (dimension): (default: *\pslinewidth*)
tension (boolean): (default: *false*)
tensionlabel (string): (default: *\empty*)
tensionoffset (dimension): (default: *1*)
tensionlabeloffset (dimension): (default: *1.2*)
tensioncolor (PSTricks color): (default: *black*)
tensionlabelcolor (PSTricks color): (default: *black*)
tensionwidth (dimension): (default: *\pslinewidth*)
labeloffset (dimension): (default: *0.7*)
labelangle (PSTricks label angle): (default: *0*)
labelInside (integer): (default: *0*)
dipoleconvention: (default: *receptor*)
directconvetion (boolean): (default: *true*)
dipolestyle (string): (default: *normal*)
variable (boolean): (default: *false*)
parallel (boolean): (default: *false*)
parallelarm (dimension): (default: *1.5*)
parallelep (real): (default: *0*)
parallelnode (boolean): (default: *false*)
intersect (boolean): (default: *false*)
intersectA (node):
intersectB (node):
OAinvert (boolean): (default: *true*)
OApertect (boolean): (default: *true*)
OAIplus (boolean): (default: *false*)
OAIMinus (boolean): (default: *false*)
OAIout (boolean): (default: *false*)
OAIpluslabel (string): (default: *\empty*)
OAIMinuslabel (string): (default: *\empty*)
OAIoutlabel (string): (default: *\empty*)
transistorcircle (boolean): (default: *true*)
transistorinvert (boolean): (default: *false*)
transistoribase (boolean): (default: *false*)
transistoricollector (boolean): (default: *false*)
transistoriemitter (boolean): (default: *false*)
transistoribaselabel (string): (default: *\empty*)
transistoricollectorlabel (string): (default: *\empty*)
transistoriemitterlabel (string): (default: *\empty*)

TRot (angle): (default: 0)
edge (macro): (default: \ncangles)
transistortype (string): (default: PNP)
primarylabel (string): (default: \empty)
secondarylabel (string): (default: \empty)
transformerprimary (boolean): (default: false)
transformersecondary (boolean): (default: false)
transformerprimarylabel (string): (default: \empty)
transformersecondarylabel (string): (default: \empty)
tripolestyle (string): (default: normal)

3 Macros


3.1 Dipole macros

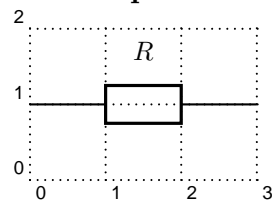

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \resistor(A)(B){$R$}
5 \end{pspicture}


```

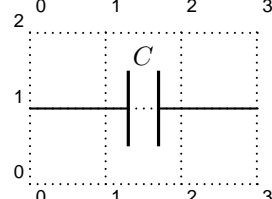

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \capacitor(A)(B){$C$}
5 \end{pspicture}


```

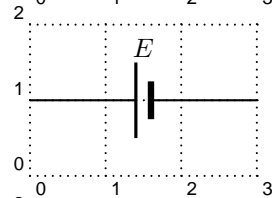

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \battery(A)(B){$E$}
5 \end{pspicture}


```

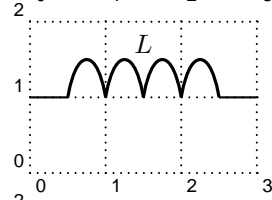

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \coil(A)(B){$L$}
5 \end{pspicture}


```

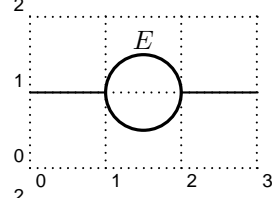

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \Ucc(A)(B){$E$}
5 \end{pspicture}


```

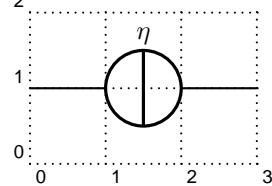

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \Icc(A)(B){$\eta$}
5 \end{pspicture}

```

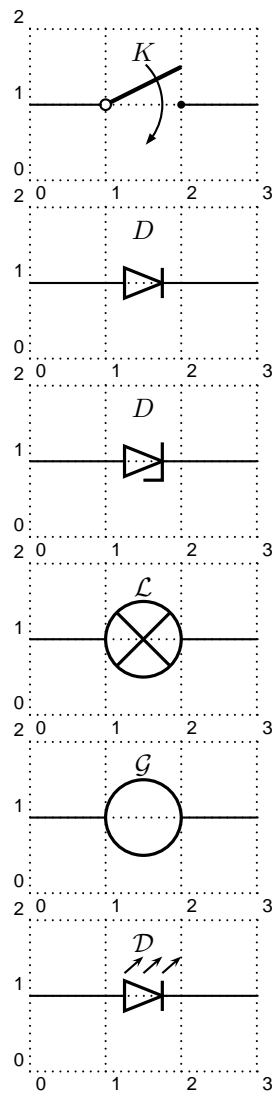

```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\switch(A)(B){$K$}
\end{pspicture}

```

```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\diode(A)(B){$D$}
\end{pspicture}

```

```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\Zener(A)(B){$D$}
\end{pspicture}

```

```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\lamp(A)(B){$\mathcal{L}$}
\end{pspicture}

```

```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\circledipole(A)(B){$\mathcal{G}$}
\end{pspicture}

```


```

\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\LED(A)(B){$\mathcal{D}$}
\end{pspicture}

```

3.2 Tripole macros

Obviously, tripoles are not node connections. So 'pst-circ' tries its best to adjust the position of the tripole regarding the three nodes. Internally, the connections are done by the `\ncangle` pst-node macro. However, the auto-positionning and the auto-connections are not always well chosen¹, so don't try to use tripole macros in strange situations!

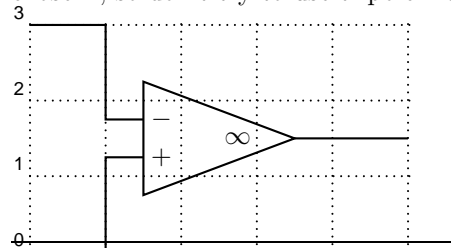


```

\begin{pspicture}(5,3)\psgrid
\pnode(0,0){A}
\pnode(0,3){B}
\pnode(5,1.5){C}
\OA(B)(A)(C)
\end{pspicture}

```

¹ This is something we are working on. I think that auto-positionning and auto-connections should be done at PostScript level and not at PSTricks level. If someone has any ideas, please mail us.

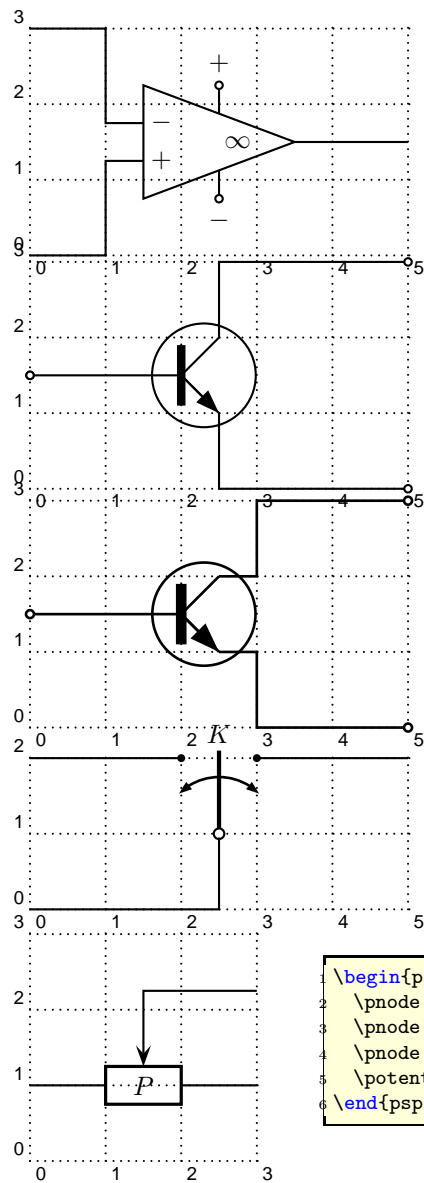

```

1 \begin{pspicture}(5,3)\psgrid
2   \pnode(0,0){A}
3   \pnode(0,3){B}
4   \pnode(5,1.5){C}
5   \OA[OApower=true](B)(A)(C)
6 \end{pspicture}

```

```

1 \begin{pspicture}(5,3)\psgrid
2   \pnode(0,1.5){A}
3   \pnode(5,0){B}
4   \pnode(5,3){C}
5   \transistor[basesep=2cm,arrows=o-o](A)(B)(C)
6 \end{pspicture}

```

```

1 \begin{pspicture}(5,3)\psgrid
2   \pnode(0,1.5){A}\psset{linewidth=1pt}
3   \transistor[basesep=2cm,arrows=o-o](A){Emitter}{
4     Collector}
5   \psline{o-}(5,3)(3,3)(3,3|Collector)(Collector)
6   \psline{o-}(5,0)(3,0)(3,0|Emitter)(Emitter)
7   \psline{o-}(A)([nodesep=2]A)
8 \end{pspicture}

```

```

1 \begin{pspicture}(5,2)\psgrid
2   \pnode(0,2){A}
3   \pnode(5,2){B}
4   \pnode(0,0){C}
5   \Tswitch(A)(B)(C){K}
6 \end{pspicture}


```

```

1 \begin{pspicture}(3,3)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \pnode(3,2.25){C}
5   \potentiometer[labeloffset=0pt](A)(B)(C){P}
6 \end{pspicture}

```


3.3 Quadrupole macros

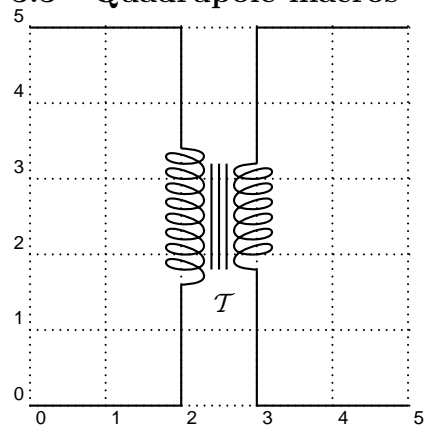

```

1 \begin{pspicture}(5,5)\psgrid
2   \pnode(0,5){A}
3   \pnode(0,0){B}
4   \pnode(5,5){C}
5   \pnode(5,0){D}
6   \transformer(A)(B)(C)(D){\mathcal T}
7 \end{pspicture}

```

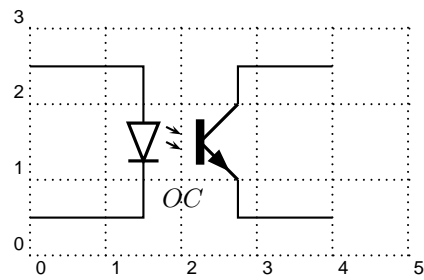


```

1 \begin{pspicture}(5,3)\psgrid
2   \pnode(0,2.5){A}
3   \pnode(0,0.5){B}
4   \pnode(4,2.5){C}
5   \pnode(4,0.5){D}
6   \optoCoupler(A)(B)(C)(D){$OC$}
7 \end{pspicture}

```

3.4 Multidipole

`\multidipole` is a macro that allows multiple dipoles to be drawn between two specified nodes. `\multidipole` takes as many arguments as you want. **Note the dot that is after the last dipole.**

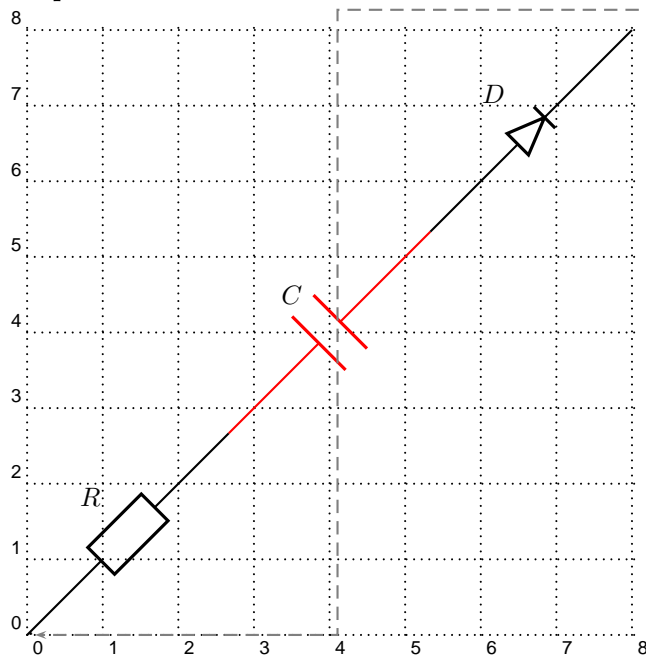


```

1 \begin{pspicture}(8,8)\psgrid
2   \pnode(0,0){A}
3   \pnode(8,8){B}
4   \multidipole(A)(B)\resistor{$R$}%
5     \capacitor[linecolor=red]{$C$}%
6     \diode{$D$}{\rnode{Dot2}}.
7 \end{pspicture}

```

Important: for the time being, `\multidipole` takes optional arguments but does not restore original values. We recommend not using it.

3.5 Wire

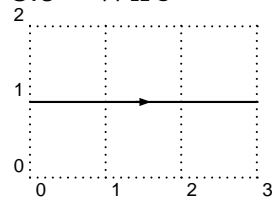


```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \wire(A)(B)
5 \end{pspicture}

```

3.6 Potential

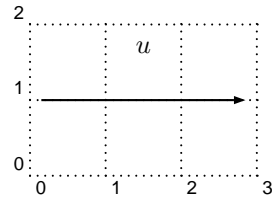


```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \tension(A)(B){$u$}
5 \end{pspicture}

```

3.7 ground

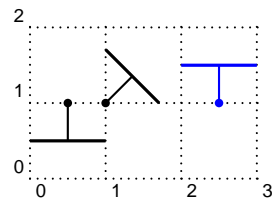


```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0.5,1){A}
3   \pnode(1,1){B}
4   \pnode(2.5,1){C}
5   \ground(A)
6   \ground{135}(B)
7   \ground[linecolor=blue]{180}(C)
8 \end{pspicture}

```

4 Parameters


4.1 Label parameters

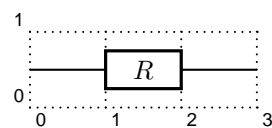

```

1 \begin{pspicture}(3,1)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor[labeloffset=0](A)(B){$R$}
5 \end{pspicture}


```

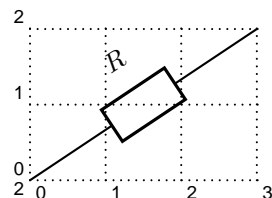

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,0){A}
3   \pnode(3,2){B}
4   \resistor[labelangle=:U](A)(B){$R$}
5 \end{pspicture}


```

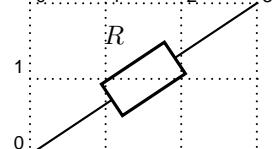

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,0){A}
3   \pnode(3,2){B}
4   \resistor[labelangle=0](A)(B){$R$}
5 \end{pspicture}


```

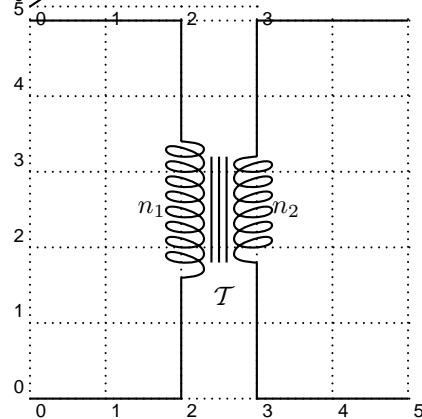

```

1 \begin{pspicture}(5,5)\psgrid
2   \pnode(0,5){A}
3   \pnode(0,0){B}
4   \pnode(5,5){C}
5   \pnode(5,0){D}
6   \transformer[primarylabel=$n_1$,
7     secondarylabel=$n_2$](A)(B)(C)(D){$\mathcal{T}$}
8 \end{pspicture}

```

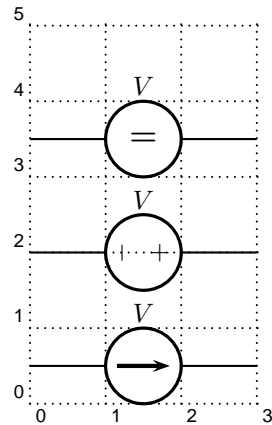

```


1 \begin{pspicture}(3,4.5)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \Ucc[labelInside=1](A)(B){$V$}
5   \pnode(0,2){A}
6   \pnode(3,2){B}
7   \Ucc[labelInside=2](A)(B){$V$}
8   \pnode(0,3.5){A}
9   \pnode(3,3.5){B}
10  \Ucc[labelInside=3](A)(B){$V$}
11 \end{pspicture}

```

4.2 Current intensity and electrical potential parameters

If the `intensity` parameter is set to `true`, an arrow is drawn on the wire connecting one of the nodes to the dipole. If the `tension` parameter is set to `true`, an arrow is drawn parallel to the dipole.


The way those arrows are drawn is set by `dipoleconvention` and `directconvention` parameters. `dipoleconvention` can take two values : `generator` or `receptor`. `directconvention` is a boolean.

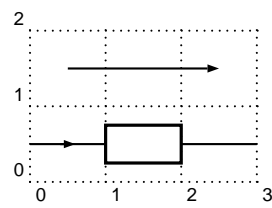

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor[intensity,tension](A)(B){}
5 \end{pspicture}


```

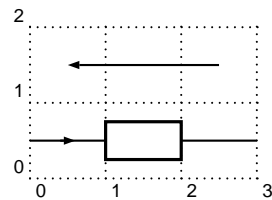

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor[intensity,tension,
5     dipoleconvention=generator](A)(B){}
6 \end{pspicture}


```

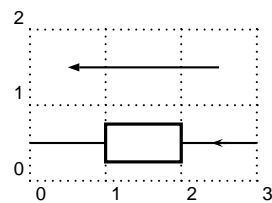

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor[intensity,tension,
5     directconvention=false](A)(B){}
6 \end{pspicture}

```

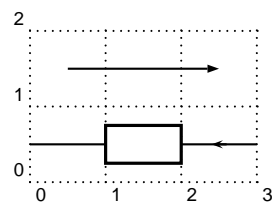


```


1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor[intensity,tension,
5     dipoleconvention=generator,directconvention=false](A)(B){}
6 \end{pspicture}

```


If `intensitylabel` is set to a non empty argument, then `intensity` is automatically set to `true`. If `tensionlabel` is set to a non empty argument, then `tension` is automatically set to `true`.

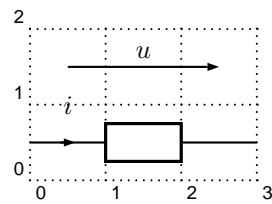

```
\begin{pspicture}(3,2)\psgrid
\pnode(0,.5){A}
\pnode(3,.5){B}
\resistor[intensitylabel=$i$,tensionlabel=$u$](A)(B){}
\end{pspicture}
```

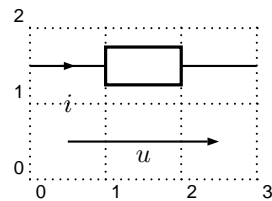


```
\begin{pspicture}(3,2)\psgrid
\pnode(0,1.5){A}
\pnode(3,1.5){B}
\resistor[intensitylabel=$i$,intensitylabeloffset=-0.5,
tensionlabel=$u$,tensionlabeloffset=-1.2,
tensionoffset=-1](A)(B){}
\end{pspicture}
```

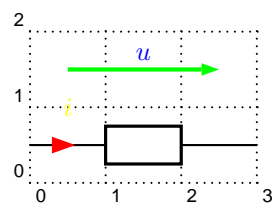


```
\begin{pspicture}(3,2)\psgrid
\pnode(0,.5){A}
\pnode(3,.5){B}
\resistor[intensitylabel=$i$,intensitywidth=3\pslinewidth,
intensitycolor=red,intensitylabelcolor=yellow,
tensionlabel=$u$,tensionwidth=2\pslinewidth,
tensioncolor=green,tensionlabelcolor=blue](A)(B){}
\end{pspicture}
```


Some specific intensity parameters are available for tripoles and quadrupoles.

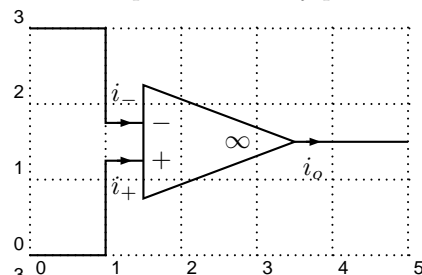

```
\begin{pspicture}(5,3)\psgrid
\pnode(0,0){A}
\pnode(0,3){B}
\pnode(5,1.5){C}
\OA[OAipluslabel=$i_+$,
OAiminuslabel=$i_-$,
OAioutlabel=$i_o$](B)(A)(C)
\end{pspicture}
```

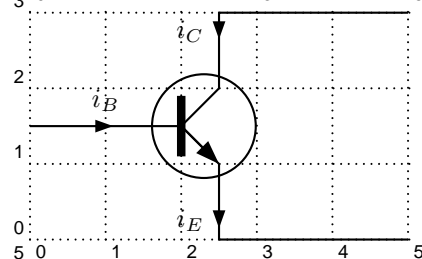


```
\begin{pspicture}(5,3)\psgrid
\pnode(0,1.5){A}
\pnode(5,0){B}
\pnode(5,3){C}
\transistor[basesep=2cm,transistoribaselabel=$i_B$,
transistoricollectorlabel=$i_C$,
transistoriemitterlabel=$i_E$](A)(B)(C)
\end{pspicture}
```

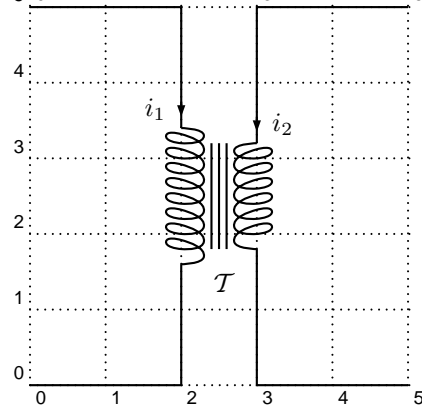

```
\begin{pspicture}(5,5)\psgrid
\pnode(0,5){A}
\pnode(0,0){B}
\pnode(5,5){C}
\pnode(5,0){D}
\transformer[transformerprimarylabel=$i_1$,
transformerissecondarylabel=$i_2$]%(A)(B)(C)(D){$\mathcal{T}$}
\end{pspicture}
```

4.3 Parallel parameters


If the `parallel` parameter is set to `true`, the dipole is drawn parallel to the line connecting the nodes.

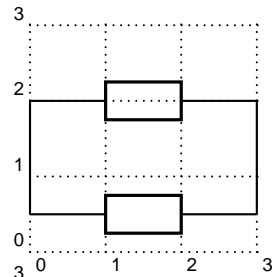

```

1 \begin{pspicture}(3,3)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor(A)(B){}
5   \resistor[parallel](A)(B){}
6 \end{pspicture}


```

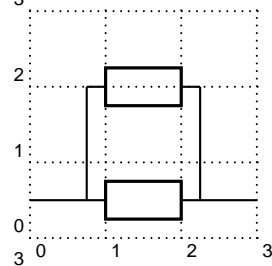

```

1 \begin{pspicture}(3,3)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor(A)(B){}
5   \resistor[parallel,parallelsep=.5](A)(B){}
6 \end{pspicture}


```

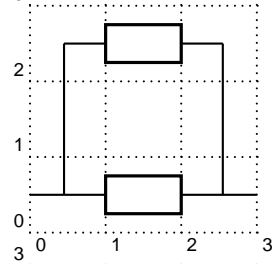

```

1 \begin{pspicture}(3,3)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor(A)(B){}
5   \resistor[parallel,parallelsep=.3,
6     parallelarm=2](A)(B){}
7 \end{pspicture}


```

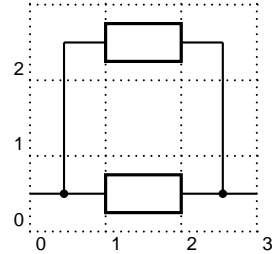

```

1 \begin{pspicture}(3,3)\psgrid
2   \pnode(0,.5){A}
3   \pnode(3,.5){B}
4   \resistor(A)(B){}
5   \resistor[parallel,parallelsep=.3,
6     parallelarm=2,parallelnode](A)(B){}
7 \end{pspicture}

```

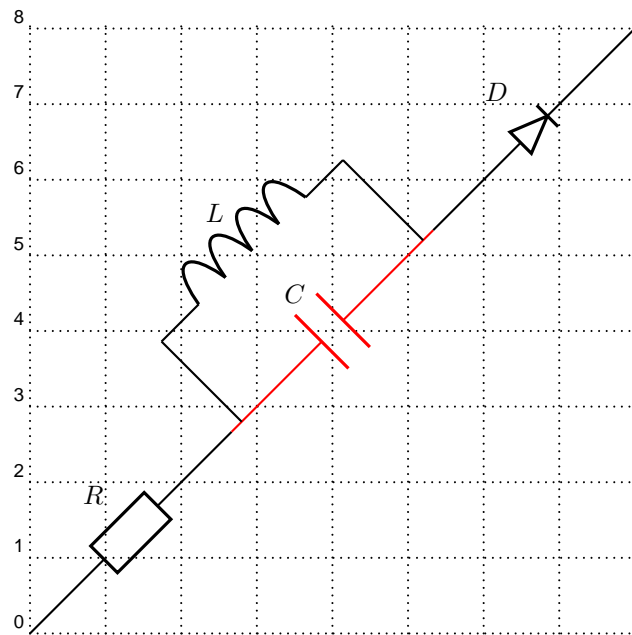


```

\begin{pspicture}(8,8)\psgrid
\pnode(0,0){A}
\pnode(8,8){B}
\multidipole(A)(B)\resistor{$R$}%
\capacitor[linecolor=red]{$C$}%
\coil[parallel,parallelsep=.1]{$L$}%
\diode{$D$}.
\end{pspicture}

```

Note: When used with `\multidipole`, the `parallel` parameter must not be set for the first dipole.

4.4 Wire intersections

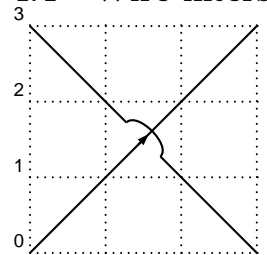


```

\begin{pspicture}(3,3)\psgrid
\pnode(0,0){A}
\pnode(3,3){B}
\pnode(0,3){C}
\pnode(3,0){D}
\wire(A)(B)
\wire[intersect,intersectA=A,intersectB=B](C)(D)
\end{pspicture}

```


Wire intersect parameters work also with `\multidipole`.

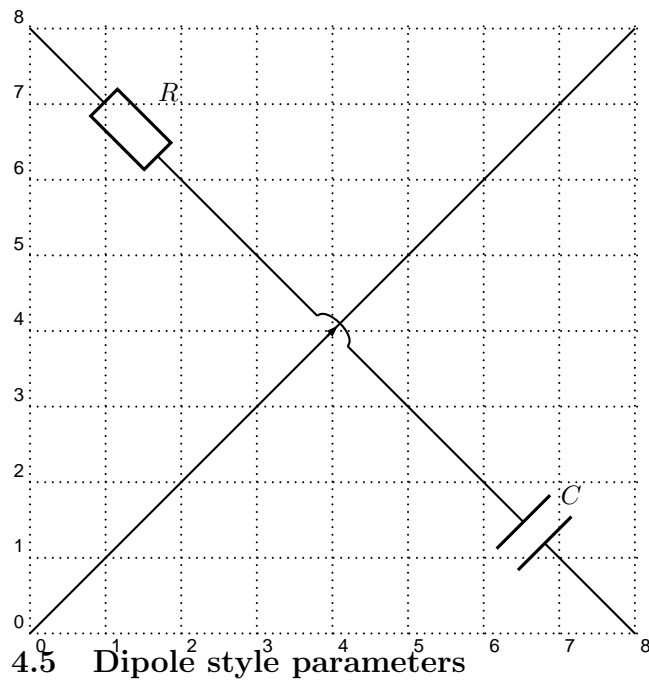

```

1 \begin{pspicture}(8,8)\psgrid
2   \pnode(0,0){A}
3   \pnode(8,8){B}
4   \pnode(0,8){C}
5   \pnode(8,0){D}
6   \wire(A)(B)
7   \multidipole(C)(D)\resistor{$R$}%
8   \wire[intersect,intersectA=A,
9     intersectB=B]%
10  \capacitor{$C$}.
11 \end{pspicture}


```

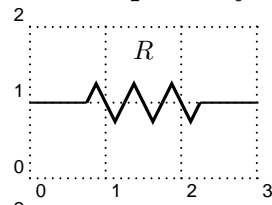

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \resistor[dipolestyle=zigzag](A)(B){$R$}
5 \end{pspicture}


```

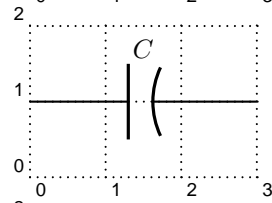

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \capacitor[dipolestyle=chemical](A)(B){$C$}
5 \end{pspicture}


```

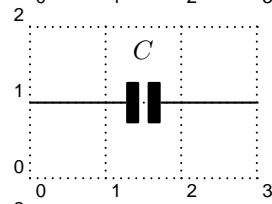

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \capacitor[dipolestyle=elektor](A)(B){$C$}
5 \end{pspicture}


```

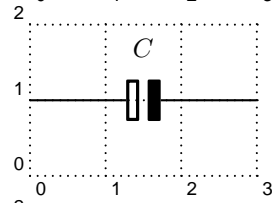

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \capacitor[dipolestyle=elektorchemical](A)(B){$C$}
5 \end{pspicture}


```

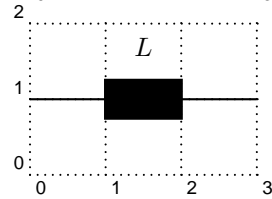

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \coil[dipolestyle=rectangle](A)(B){$L$}
5 \end{pspicture}


```

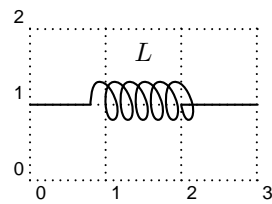

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \coil[dipolestyle=curved](A)(B){$L$}
5 \end{pspicture}


```

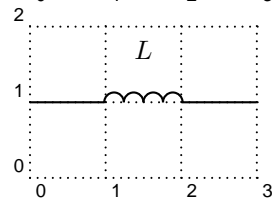

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \coil[dipolestyle=elektor](A)(B){$L$}
5 \end{pspicture}


```

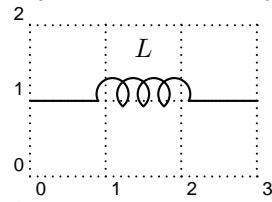

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \coil[dipolestyle=elektorcurved](A)(B){$L$}
5 \end{pspicture}


```

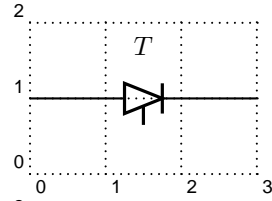

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \diode[dipolestyle=thyristor](A)(B){$T$}
5 \end{pspicture}


```

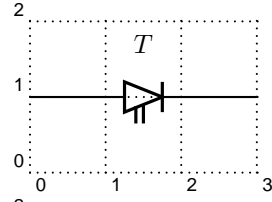

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \diode[dipolestyle=GT0](A)(B){$T$}
5 \end{pspicture}


```

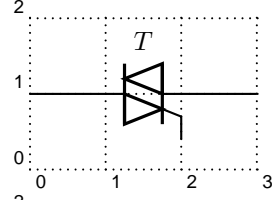

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \diode[dipolestyle=triac](A)(B){$T$}
5 \end{pspicture}


```

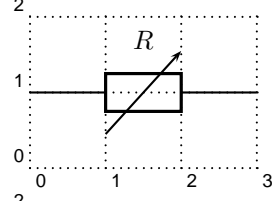

```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \resistor[variable](A)(B){$R$}
5 \end{pspicture}


```

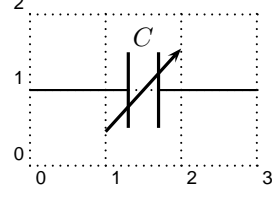


```

1 \begin{pspicture}(3,2)\psgrid
2   \pnode(0,1){A}
3   \pnode(3,1){B}
4   \capacitor[variable](A)(B){$C$}
5 \end{pspicture}


```

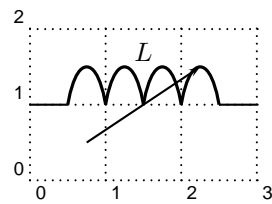

```
\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\coil[variable](A)(B){$L$}
\end{pspicture}
```

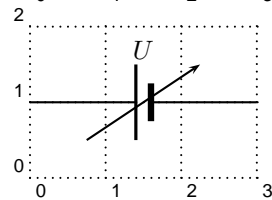


```
\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\battery[variable](A)(B){$U$}
\end{pspicture}
```

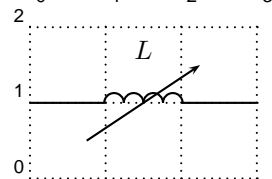


```
\begin{pspicture}(3,2)\psgrid
\pnode(0,1){A}
\pnode(3,1){B}
\coil[dipolestyle=elektor,variable](A)(B){$L$}
\end{pspicture}
```

⁰In the following example the parameter `dipolestyle` is used for a tripole and quadrupole, because the coils are drawn as rectangles and the resistor as a zigzag.

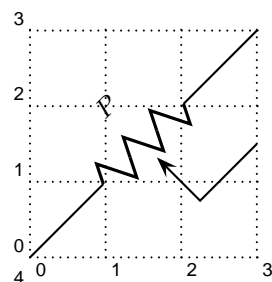


```
\begin{pspicture}(3,3)\psgrid
\pnode(0,0){A}
\pnode(3,3){B}
\pnode(3,1.5){C}
\potentiometer[dipolestyle=zigzag,%
labelangle=:U](A)(B)(C){$P$}
\end{pspicture}
```

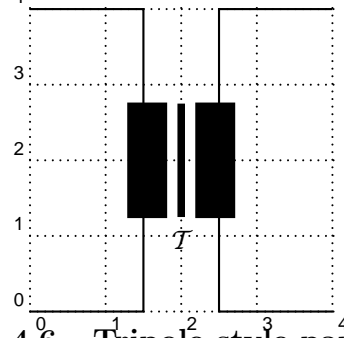


```
\begin{pspicture}(4,4)\psgrid
\pnode(0,4){A}
\pnode(0,0){B}
\pnode(4,4){C}
\pnode(4,0){D}
\transformer[dipolestyle=rectangle](A)(B)(C)(D){$\mathcal{T}$}
\end{pspicture}
```

4.6 Tripole style parameters

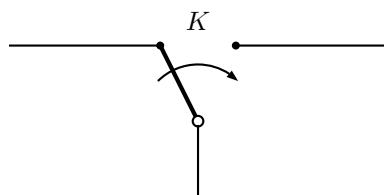


```
\begin{pspicture}(5,3)
\pnode(0,2){A}
\pnode(5,2){B}
\pnode(0,0){C}
\Tswitch[tripolestyle=left](A)(B)(C){$K$}
\end{pspicture}
```

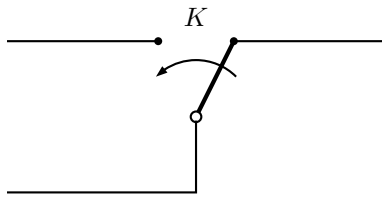

```

1 \begin{pspicture}(5,3)
2   \pnode(0,2){A}
3   \pnode(5,2){B}
4   \pnode(0,0){C}
5   \Tswitch[tripolestyle=right](A)(B)(C){$K$}
6 \end{pspicture}

```

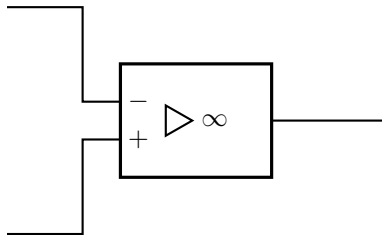


```

1 \begin{pspicture}(5,3)
2   \pnode(0,3){A}
3   \pnode(0,0){B}
4   \pnode(5,1.5){C}
5   \OA[tripolestyle=french](A)(B)(C)
6 \end{pspicture}

```


4.7 Other Parameters

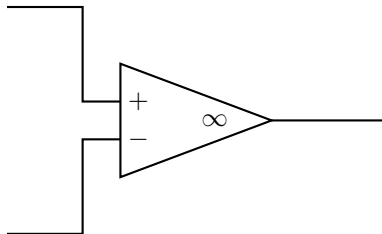

```

1 \begin{pspicture}(5,3)
2   \pnode(0,0){A}
3   \pnode(0,3){B}
4   \pnode(5,1.5){C}
5   \OA[OAinvert=false](B)(A)(C)
6 \end{pspicture}


```

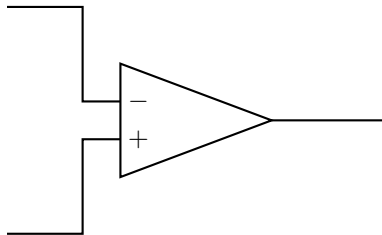

```

1 \begin{pspicture}(5,3)
2   \pnode(0,0){A}
3   \pnode(0,3){B}
4   \pnode(5,1.5){C}
5   \OA[OAperfect=false](B)(A)(C)
6 \end{pspicture}

```

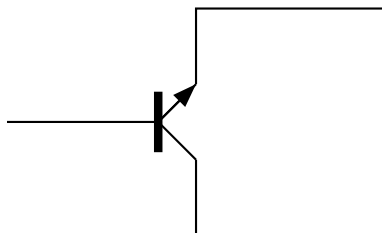


```

1 \begin{pspicture}(5,3)
2   \pnode(0,1.5){A}
3   \pnode(5,0){B}
4   \pnode(5,3){C}
5   \transistor[basesep=2cm,%
6     transistorinvert,transistorcircle=false](A)(B)(C)
7 \end{pspicture}

```


5 Examples

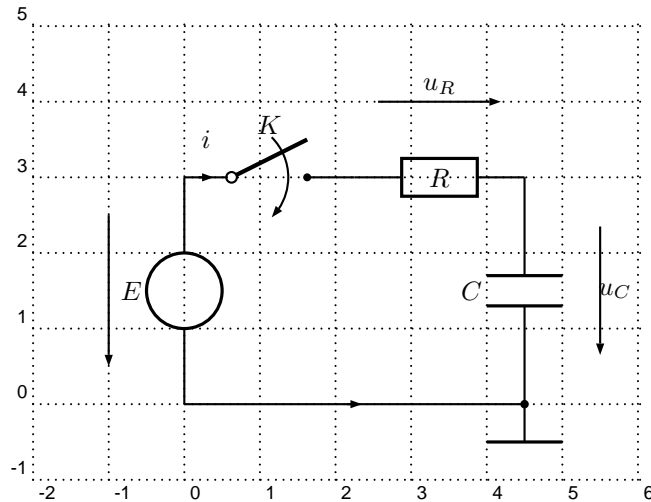

```

1 \begin{pspicture}(-1.5,-1)(6,5)
2 \psgrid[subgriddiv=1,griddots=10]
3 % Node definitions
4 \pnode(0,0){A}
5 \pnode(0,3){B}
6 \pnode(4.5,3){C}
7 \pnode(4.5,0){D}
8 % Dipole node connection
9 \Ucc[tension,dipoleconvention=
10 generator](A)(B){$E$}
11 \multidipole(B)(C)%
12 \switch[intensitylabel=$i$]{$K$}%
13 \resistor[labeloffset=0,tensionlabel
14 =$u_R$]{$R$}.
15 \capacitor[tensionlabel={$u_C$},
16 tensionlabeloffset=-1.2,
17 tensionoffset=-1,
18 directconvention=false](D)(C){$C$}
19 % Wire to complete circuit
20 \wire(A)(D)
21 % Ground
22 \ground(D)
23 \end{pspicture}


```

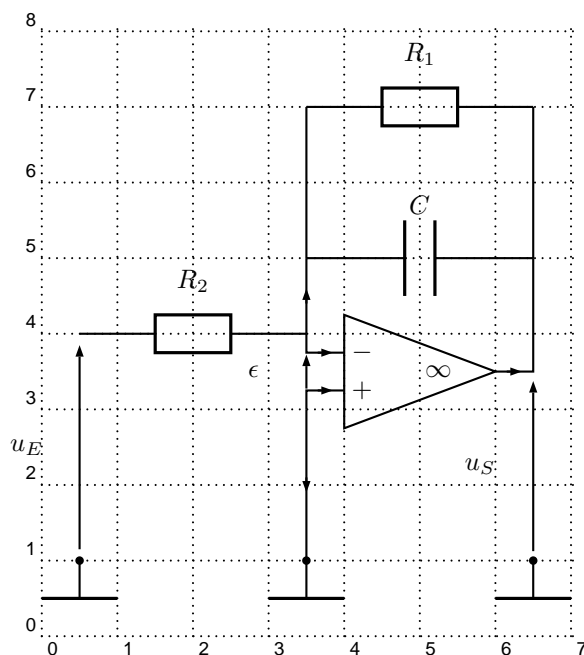

```

1 \begin{pspicture}(-0.5,0)(7,8)
2 \psgrid[subgriddiv=1,griddots=10]
3 % Node definitions
4 \pnode(0.5,1){A}
5 \pnode(3.5,1){B}
6 \pnode(6.5,1){C}
7 \pnode(0.5,4){D}
8 \pnode(3.5,4){Minus}
9 \pnode(3.5,3){Plus}
10 \pnode(6.5,5){S}
11 \pnode(3.5,5){E}
12 % Dipole node connections
13 \resistor(D)(Minus){$R_2$}
14 \capacitor(E)(S){$C$}
15 \resistor[parallel,parallellarm=2](E)(
16 S){$R_1$}
17 \OA[intensity](Minus)(Plus)(S)
18 % Wires
19 \wire(Minus)(E)
20 \wire(Plus)(B)
21 % Tensions
22 \tension(A)(D){$u_E$}
23 \makeatletter % (special tricks see
24 below)
25 \tension(C)(S@@){$u_S$}
26 \tension[linecolor=blue](Plus@@)(
27 Minus@@){$\epsilon$}
28 \makeatother
29 % Grounds
30 \ground(A)
31 \ground(B)
32 \ground(C)
33 \end{pspicture}

```
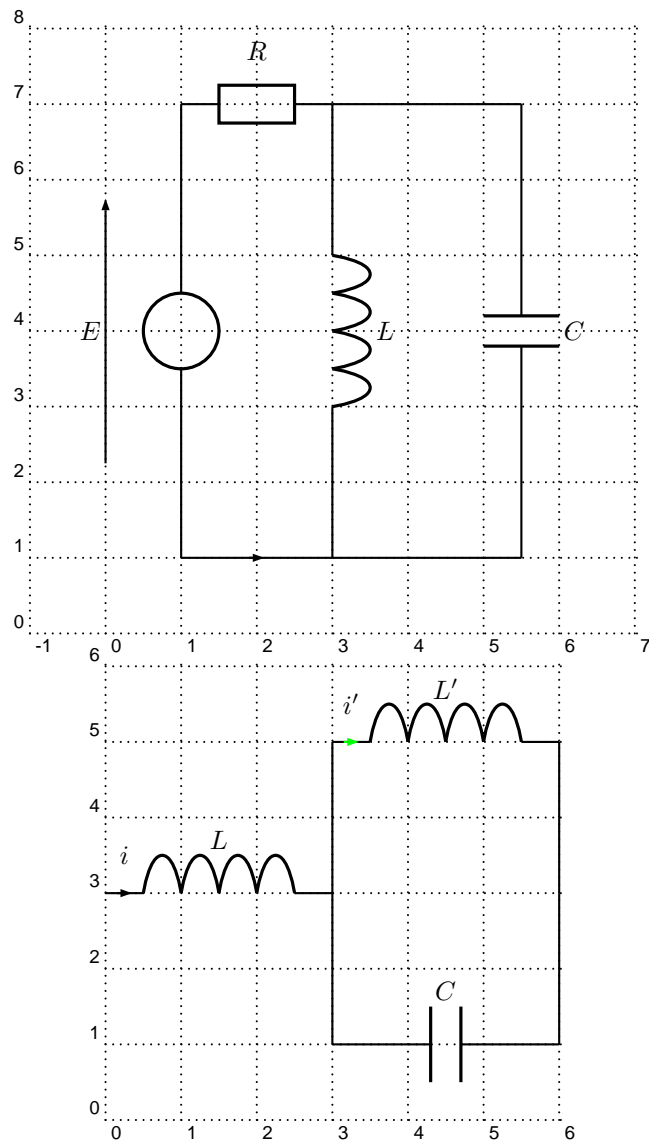
```


1 \begin{pspicture}(-1,0)(7,8)
2 \psgrid[subgriddiv=1,griddots=10]
3 % Node definitions
4 \pnode(1,1){A}
5 \pnode(1,7){B}
6 \pnode(3,1){C}
7 \pnode(3,7){D}
8 % Dipole node connections
9 \Ucc[tensionlabel=$E$](A)(B){}
10 \resistor(B)(D){$R$}
11 \coil(D)(C){$L$}
12 \capacitor[parallel,parallelarm
13 =2.5](D)(C){$C$}
14 % Wire
15 \wire(A)(C)
16 \end{pspicture}

```

```

1 \begin{pspicture}(6,6)
2 \psgrid[subgriddiv=1,griddots=10]
3 % Node definitions
4 \pnode(0,3){A}
5 \pnode(3,3){B}
6 \pnode(6,3){C}
7 % Dipole node connections
8 \coil[intensitylabel=$i$](A)(B){$L$}
9 \coil[intensitylabel=$i'$,
10 intensitycolor=green,
11 parallel,parallelarm=2](B)(C){$L'$}
12 \capacitor[parallel,parallelarm
13 =-2](B)(C){$C$}
14 \end{pspicture}


```

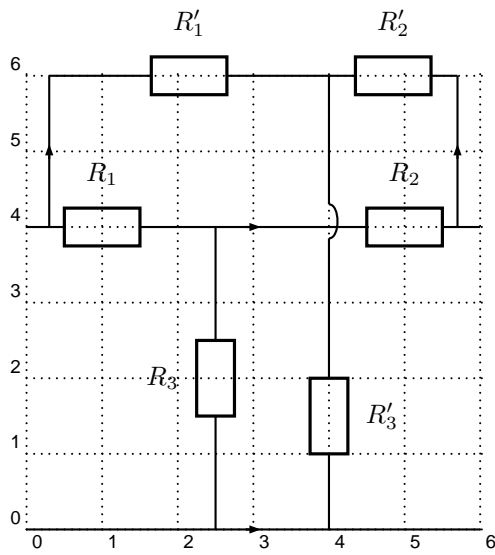

```

1 \begin{pspicture}(6,6)
2 \psgrid[subgriddiv=1,griddots=10]
3 % Node definitions
4 \pnode(0,0){A}\pnode(6,0){B}
5 \pnode(0.3,4){Cprime}\pnode(5.7,4)
6   {Dprime}
7 \pnode(2.5,4){Gprime}\pnode(2.5,0)
8   {Hprime}
9 \pnode(0,4){C}\pnode(6,4){D}
10 \pnode(0.3,6){E}\pnode(5.7,6){F}
11 \pnode(4,6){G}\pnode(4,0){H}
12 \multidipole(G)(H)%
13   \wire[intersect,
14     intersectA=C,intersectB=D]
15   \resistor{$R'_3$}.
16   \resistor(E)(G){$R'_1$}
17   \resistor(G)(F){$R'_2$}
18   \multidipole(C)(D)\resistor{$R_1$}
19   %
20   \wire\resistor{$R_2$}.
21   \wire(A)(B)\wire(Cprime)(E)
22   \wire(Dprime)(F)
23   \resistor(Hprime)(Gprime){$R_3$}
24 \end{pspicture}


```

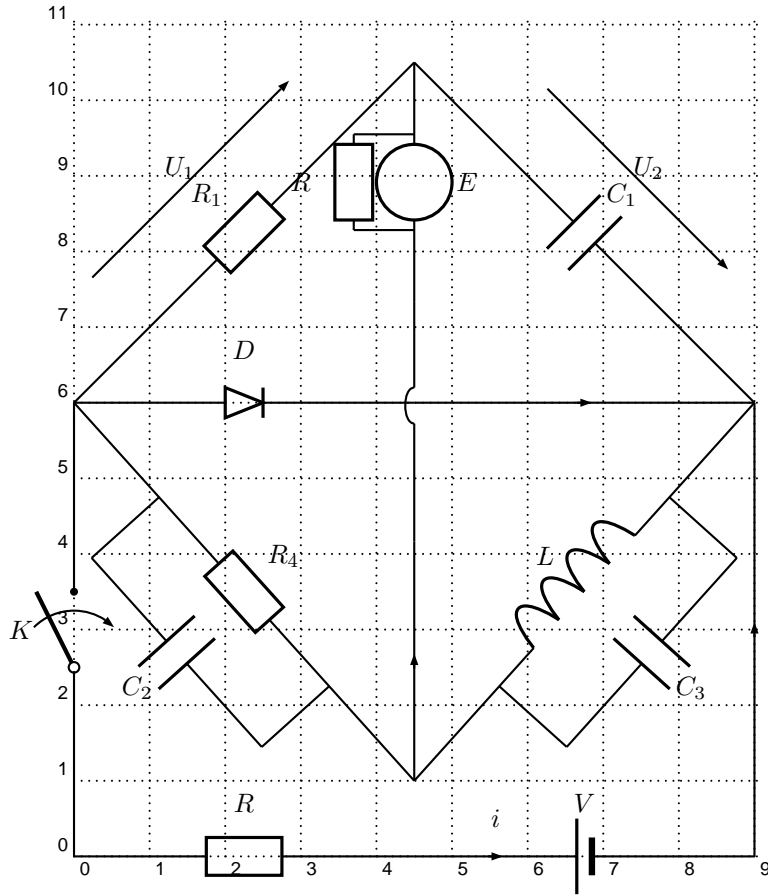

```

1 \begin{pspicture}(9,11)
2 \psgrid[subgriddiv=1,
3   griddots=10]
4 % Node definitions
5 \pnode(0,0){A}
6 \pnode(9,0){B}
7 \pnode(0,6){C}
8 \pnode(9,6){D}
9 \pnode(4.5,1){E}
10 \pnode(4.5,10.5){F}
11 %
12 \switch(A)(C){$K$}
13 \multidipole(A)(B)\resistor
14   {$R_1$}%
15   \battery[intensitylabel=$i$]{$V$}.
16 \wire(B)(D)
17 \multidipole(C)(D)\diode{$D$}
18 \wire.
19 \resistor[tensionlabel=$U_1$]
20   (C)(F){$R_4$}
21 \resistor(C)(E){$R_4$}
22 \capacitor[parallel,
23   parallelarm=1.2,
24   parallelsep=1.5](C)(E){$C_2$}
25 \coil(E)(D){$L$}
26 \capacitor[parallel,
27   parallelarm=1.2,
28   parallelsep=1.5](E)(D){$C_3$}
29 \capacitor[tensionlabel=$U_2$]
30   (F)(D){$C_1$}
31 \multidipole(E)(F)\wire%
32 \wire[intersect,
33   intersectA=C,intersectB=D]
34 %
35 \circledipole[labeloffset
36   =-0.7]{$E$}%
37 \resistor[parallel,
38   parallelarm=.6,
39   parallelsep=.8]{$R$}.
40 \end{pspicture}

```

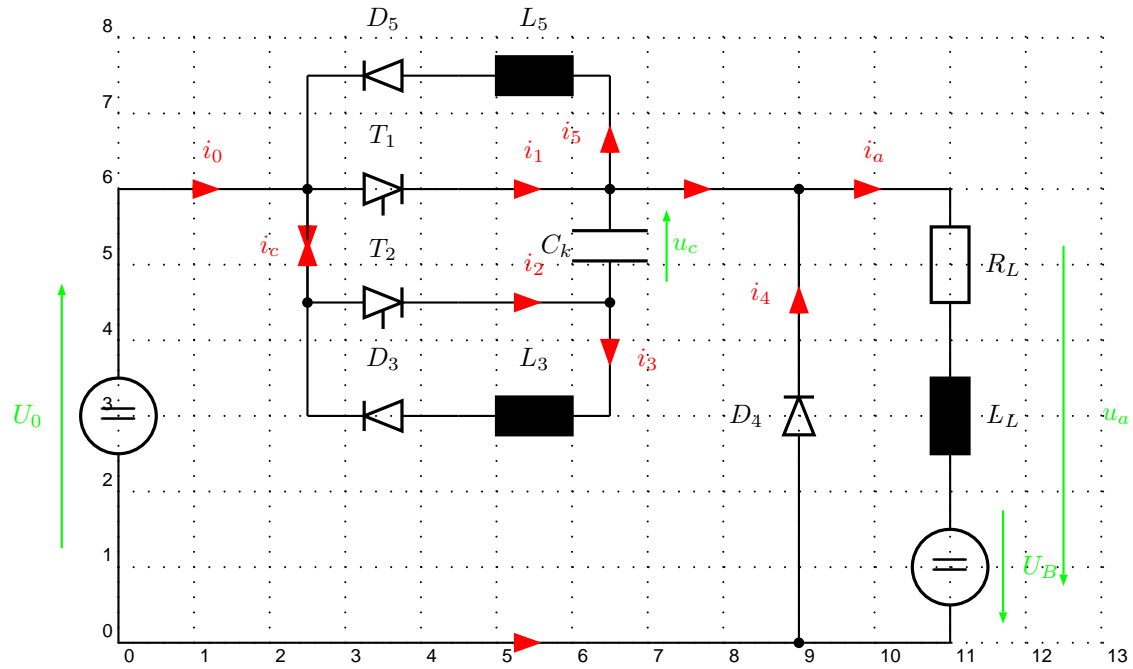


```


1 \begin{pspicture}(13,8)
2   \psset{intensitycolor=red,intensitylabelcolor=red,tensioncolor=green,tensionlabelcolor=green,
3     %
4     intensitywidth=3pt}
5   \psgrid[griddots=5,gridlabels=7pt,subgriddiv=0]
6   \circledipole[tension,tensionlabel=$U_0$,tensionoffset=0.75,labeloffset=0](0,0)(0,6){\LARGE\
7     \textbf{=}}
8   \wire[intensity,intensitylabel=$i_0$](0,6)(2.5,6)
9   \diode[dipolestyle=thyristor](2.5,6)(4.5,6){$T_1$}
10  \wire[intensity,intensitylabel=$i_1$](4.5,6)(6.5,6)
11  \multidipole(6.5,7.5)(2.5,7.5)%
12    \coil[dipolestyle=rectangle,labeloffset=-0.75]{$L_5$}%
13    \diode[labeloffset=-0.75]{$D_5$}.
14  \wire[intensity,intensitylabel=$i_5$](6.5,6)(6.5,7.5)
15  \wire(2.5,7.5)(2.5,3)
16  \wire[intensity,intensitylabel=$i_c$](2.5,4.5)(2.5,6)
17  \qdisk(2.5,6){2pt}\qdisk(6.5,6){2pt}
18  \diode[dipolestyle=thyristor](2.5,4.5)(4.5,4.5){$T_2$}
19  \wire[intensity,intensitylabel=$i_2$](4.5,4.5)(6.5,4.5)
20  \capacitor[tension,tensionlabel=$u_c$,tensionoffset=-0.75,tensionlabeloffset=-1](6.5,4.5)
21    (6.5,6){$C_k$}
22  \qdisk(2.5,4.5){2pt}\qdisk(6.5,4.5){2pt}
23  \wire[intensity,intensitylabel=$i_3$](6.5,4.5)(6.5,3)
24  \multidipole(6.5,3)(2.5,3)%
25    \coil[dipolestyle=rectangle,labeloffset=-0.75]{$L_3$}%
26    \diode[labeloffset=-0.75]{$D_3$}.
27  \wire(6.5,6)(9,6)\qdisk(9,6){2pt}
28  \diode(9,0)(9,6){$D_4$}
29  \wire[intensity,intensitylabel=$i_4$](9,3.25)(9,6)
30  \wire[intensity,intensitylabel=$i_a$](9,6)(11,6)
31  \multidipole(11,6)(11,0)%
32    \resistor{$R_L$}
33    \coil[dipolestyle=rectangle]{$L_L$}
34    \circledipole[labeloffset=0,tension,tensionoffset=0.7,tensionlabel=$U_B$]{\LARGE\textbf{=}}.
35  \wire(0,0)(11,0)\qdisk(9,0){2pt}
36  \pnode(12.5,5.5){A}\pnode(12.5,0.5){B}
37  \tension(A)(B){$u_a$}
38 \end{pspicture}

```

The following example was written by Manuel Luque.

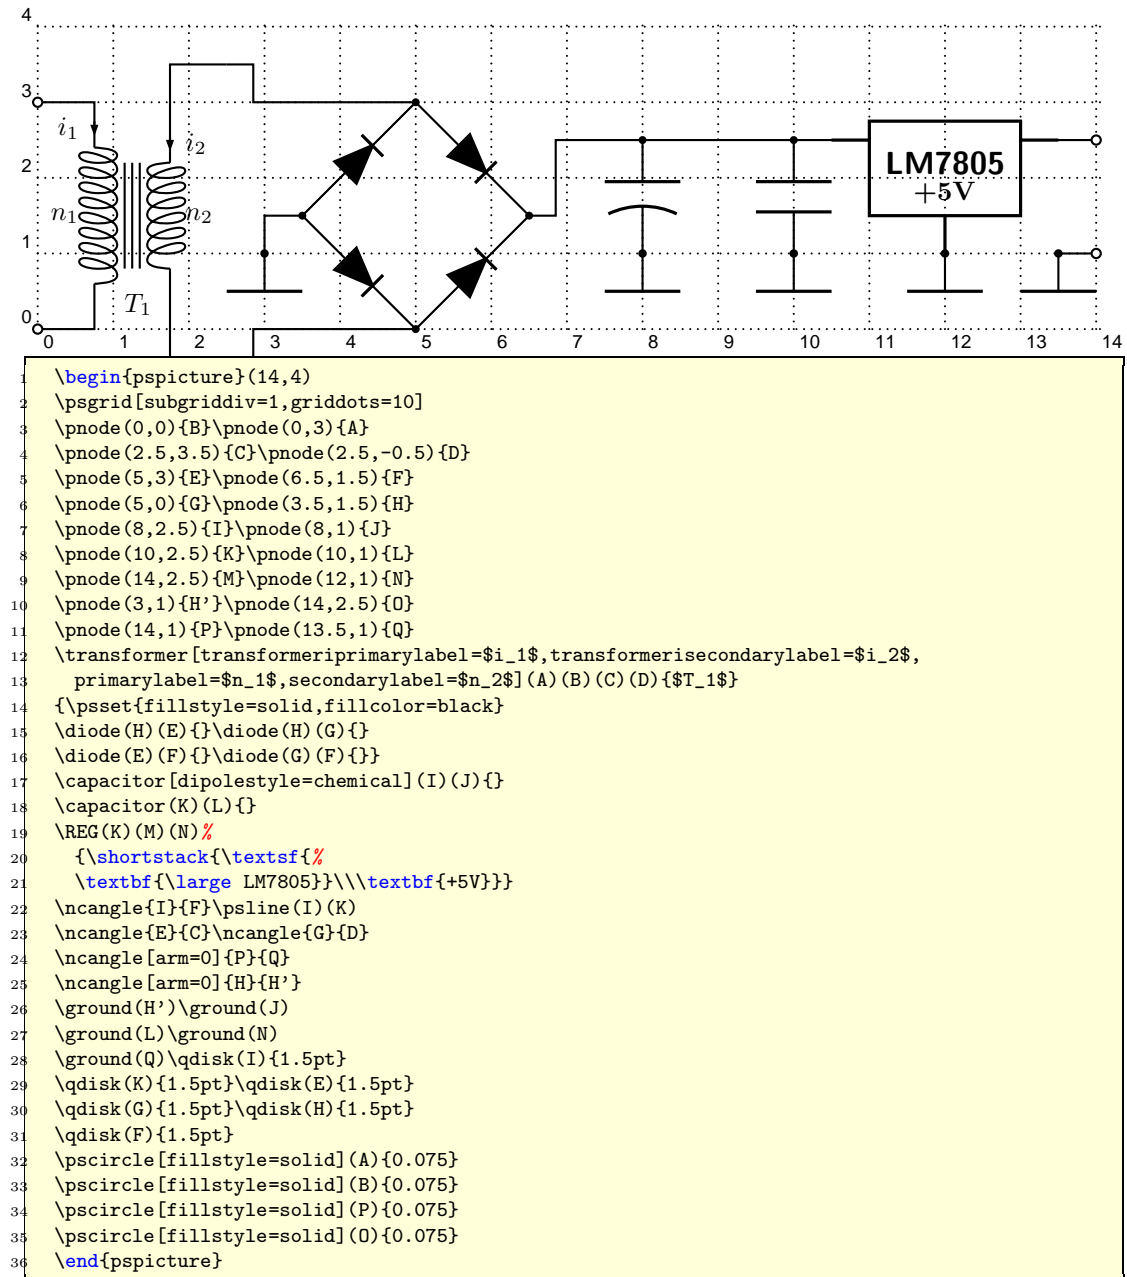

The following example was written by Lionel Cordesses.

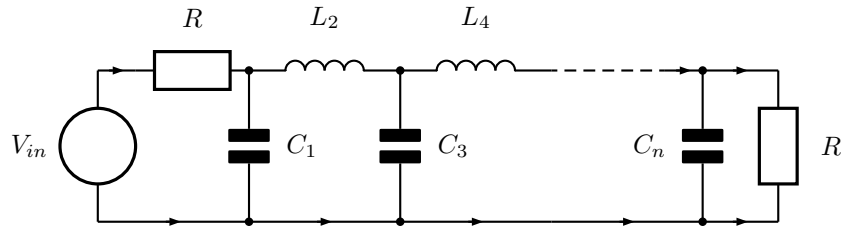


```

1 \begin{pspicture}(11,3)
2 \psset{dipolestyle=elektor}
3 \pnode(1,2){Vin}\pnode(0.5,2){S}\pnode(0.5,0){Sm}
4 \pnode(2.5,2){A}\pnode(4.5,2){B}\pnode(6.5,2){C}
5 \pnode(8,2){Cd}\pnode(8.5,2){D}\pnode(9.5,2){E}
6 \pnode(2.5,0){Am}\pnode(4.5,0){Bm}\pnode(6.5,0){Cm}
7 \pnode(8.5,0){Dm}\pnode(9.5,0){Em}
8 \Ucc[labeloffset=0.9](Sm)(S){$V_{in}$}\resistor(Vin)(A){$R$}
9 \capacitor(A)(Am){$C_1$}\capacitor(B)(Bm){$C_3$}
10 \capacitor[labeloffset=-0.7](D)(Dm){$C_n$}\resistor(E)(Em){$R$}
11 \coil(A)(B){$L_2$}\coil(B)(C){$L_4$}
12 \wire(Am)(Bm)\wire(Bm)(Cm)\wire(Cm)(Dm)\wire(Dm)(Em)\wire(D)(E)
13 \wire(Cd)(D)\psline[linestyle=dashed](C)(Cd)
14 \wire(S)(Vin)\wire(Sm)(Am)
15 \pscircle*(D){2\pslinewidth}\pscircle*(Dm){2\pslinewidth}
16 \pscircle*(A){2\pslinewidth}\pscircle*(Am){2\pslinewidth}
17 \pscircle*(B){2\pslinewidth}\pscircle*(Bm){2\pslinewidth}
18 \end{pspicture}

```

The following example was written by Christian Hoffmann.

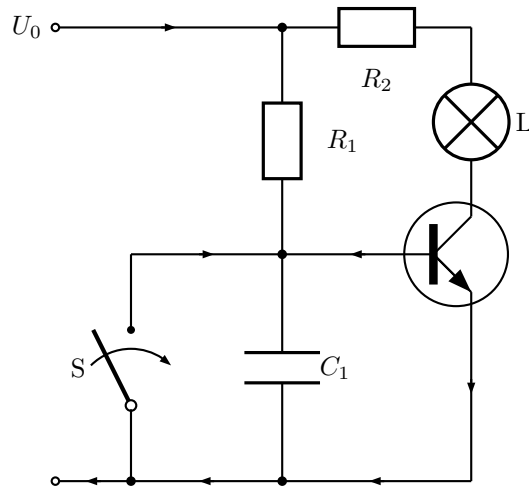

```

1 \SpecialCoor
2 \begin{pspicture}(0,-1)(7,6.5)%\psgrid
3 \pnode(0,6){plus}
4 \pnode(3,3){basis}
5 \pnode([nodesep=-2] basis){schalter}
6 \pnode(0,0){masse}
7 \wire[arrows=o-](plus)(basis|plus)
8 \uput[1](plus){$U_0$}
9 \resistor[labeloffset=.8](basis|plus)(basis){$R_1$}
10 \transistor[basesep=2cm](basis){emitter}{kollektor}
11 \wire[arrows=-*](schalter)(basis)
12 % \wire(basis)([nodesep=2] basis)
13 \wire(TBaseNode)(basis)
14 \switch(schalter|masse)(schalter){S}
15 \lamp(kollektor|plus)(kollektor){L}
16 \resistor(kollektor|plus)(basis|plus){$R_2$}
17 \wire(emitter)(emitter|masse)
18 \wire(emitter|masse)(basis|masse)
19 \capacitor(basis)(basis|masse){$C_1$}
20 \wire[arrows=-*](basis|masse)(schalter|masse)
21 \wire[arrows=-o](schalter|masse)(masse)
22 \end{pspicture}

```

6 Adding new components

Adding new components is not simple. As a matter of fact, because of the complex mechanism of `\multidipole`, there are multiple steps. Nevertheless, it can take some time...

If you want to modify the code, you need to know the following things. For a dipole, you first need to define the following items:

```

1 \def\component_name{\@ifnextchar [{\pst@component_name}{\pst@component_name
2 []}}
3 %
4 \def\pst@component/_name[#1](#2)(#3)#4{{%
5 \pst@draw@dipole{#1}{#2}{#3}{#4}\pst@draw@component_name

```

```

5      }\ignorespaces}
6
7      \def\pst@multidipole@component_name{\@ifnextchar [{\pst@multidipole@component_
8        name@}%
9        {\pst@multidipole@component_name@[]}}
10
11      \def\pst@multidipole@component_name@[#1]#2{%
12        \expandafter\def\csname pst@circ@tmp@\number\pst@circ@count@iii\endcsname
13          {#2}%
14        {\psset{#1}%
15          \ifPst@circ@parallel\aftergroup\advance\aftergroup\pst@circ@count@i\
16            aftergroup\m@ne\fi}%
17        \pst@circ@count@ii=\pst@circ@count@i%
18        \advance\pst@circ@count@ii\@ne%
19        \toks0\expandafter{\pst@multidipole@output}%
20        \edef\pst@multidipole@output{%
21          \the\toks0%
22          \pst@multidipole@def@coor%
23          \noexpand\component_name[#1]%
24          (! X@the\pst@circ@count@i\space Y@the\pst@circ@count@i)%
25          (! X@the\pst@circ@count@ii\space Y@the\pst@circ@count@ii)%
26          {\noexpand\csname pst@circ@tmp@\number\pst@circ@count@iii\endcsname}%
27        }%
28        \pst@multidipole@
29      }
30
31      \def\pst@draw@component_name{%
32        % The PSTricks code for your component
33        % The center of the component is at (0,0)
34        \pnode(component_left_end,0){dipole@1}
35        \pnode(component_right_end,0){dipole@2}}

```

Then, you have to make some changes in the \multidipole core code...In the definition of \pst@multidipole, look for the last \ifx test

```

1      % ...
2      % Extract from \pst@multidipole
3      \else
4        \ifx\circledipole #4%
5          \let\next\pst@multidipole@circledipole
6        \else
7          \ifx\LED #4%
8            \let\next\pst@multidipole@LED
9          \else
10             % Put your modification here
11             \let\next\ignorespaces
12           \fi
13         \fi
14       \fi
15
16       % Extract form \pst@multidipole
17       % ...

```

and add (marked with %%)

```

1      % ...
2      % Extract from \pst@multidipole
3      \else
4        \ifx\circledipole #4%
5          \let\next\pst@multidipole@circledipole
6        \else
7          \ifx\LED #4%
8            \let\next\pst@multidipole@LED

```



```

9          \else
10         \ifx\component_name #4%%
11         \let\next\pst@multidipole@component_name%%
12         \else%%
13         \let\next\ignorespaces
14         \fi%%
15       \fi
16     \fi
17   \fi
18   % Extract form \pst@multidipole
19   % ...

```

Do the same in \pst@multidipole@

```

1   % ...
2   % Extract from \pst@multidipole@
3   \else
4   \ifx\circledipole #1%
5   \let\next\pst@multidipole@circledipole
6   \else
7   \ifx\LED #1%
8   \let\next\pst@multidipole@LED
9   \else
10  \ifx\component_name #1%%
11  \let\next\pst@multidipole@component_name%%
12  \else%%
13  \let\next\ignorespaces
14  \pst@multidipole@output
15  \fi%%
16  \fi
17 \fi
18 \fi
19 % Extract form \pst@multidipole@
20 % ...

```

and that's it! All you have to do then is send your modified `pst-circ.tex` to me and it will become part of the official release of 'pst-circ'.

Important: Pay attention to the comment character % at the end of lines. They are *very* important in order to avoid spurious blanks.

7 Acknowledgements

We thank of course Manuel Luque for his original work on `pst-circ` and for his circuit drawings: this wouldn't have been possible without him. As usual, Denis Girou gave us a precious hand with some dark tricks of \TeX and PSTricks. Jean-Côme Charpentier wrote the outline of `\multidipole` (a story about riri, fifi and loulou...). Thanks also to Douglas Waud.